

ASSEMBLY INSTRUCTIONS

Mounting the PUTT-TRAINER on your putter (magnetic metal properties):

The PUTT-TRAINER is pre-assembled for use with standard putters. When using a „Futura“ putter, the PUTT-TRAINER (picture 1) is attached to the front hole without an adapter. If you have a putter with magnetic properties, simply place the PUTT-TRAINER on or above the head of the club. If the PUTT-TRAINER fits better when turned around through 180°, simply remove the adapter and reassemble it in this new position. The PUTT-TRAINER is not suitable for putters with a centrally fitted shaft.



picture 1

Caution: The adapter should be centrally mounted on the putter head.

Examples of magnetic metal properties Putter:




Also suitable for putters with non magnetic properties !

The adapter supplied is affixed to your putter using double stick tape strips. The adapter should be centrally mounted on the putter head. You can attach it at either point A or point B. Clean the surfaces on both the putter and the adapter where double stick tape will be applied, using either spirit or window cleaning fluid. Take a suitable double stick tape and stick it onto the appropriate area of the adapter. Apply firm pressure for 5 secs. The next step is to stick the adapter onto the putter head. Caution: Take care to stick the adapter on straight and in the exact center of the club. Remember to apply firm pressure for 5 secs. The adapter only weights 4 grams and can therefore remain permanently attached to the putter. Alternatively, it can be removed and remounted at any time.


Caution: Take care to stick the adapter on straight and in the exact center of the club.

Attention: double stick tape strips are in the box beneath the case liner.

To assemble the Adapter for non magnetic putter:

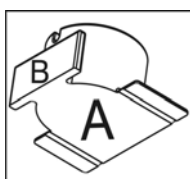

Adapter with possible examples A or B

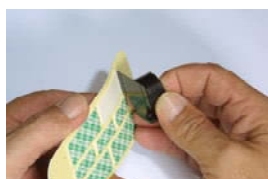

Double stick tape for A



Double stick tape for B

Other examples of A:



Other examples for B:

